


# unifit outlet single installation instruction

1

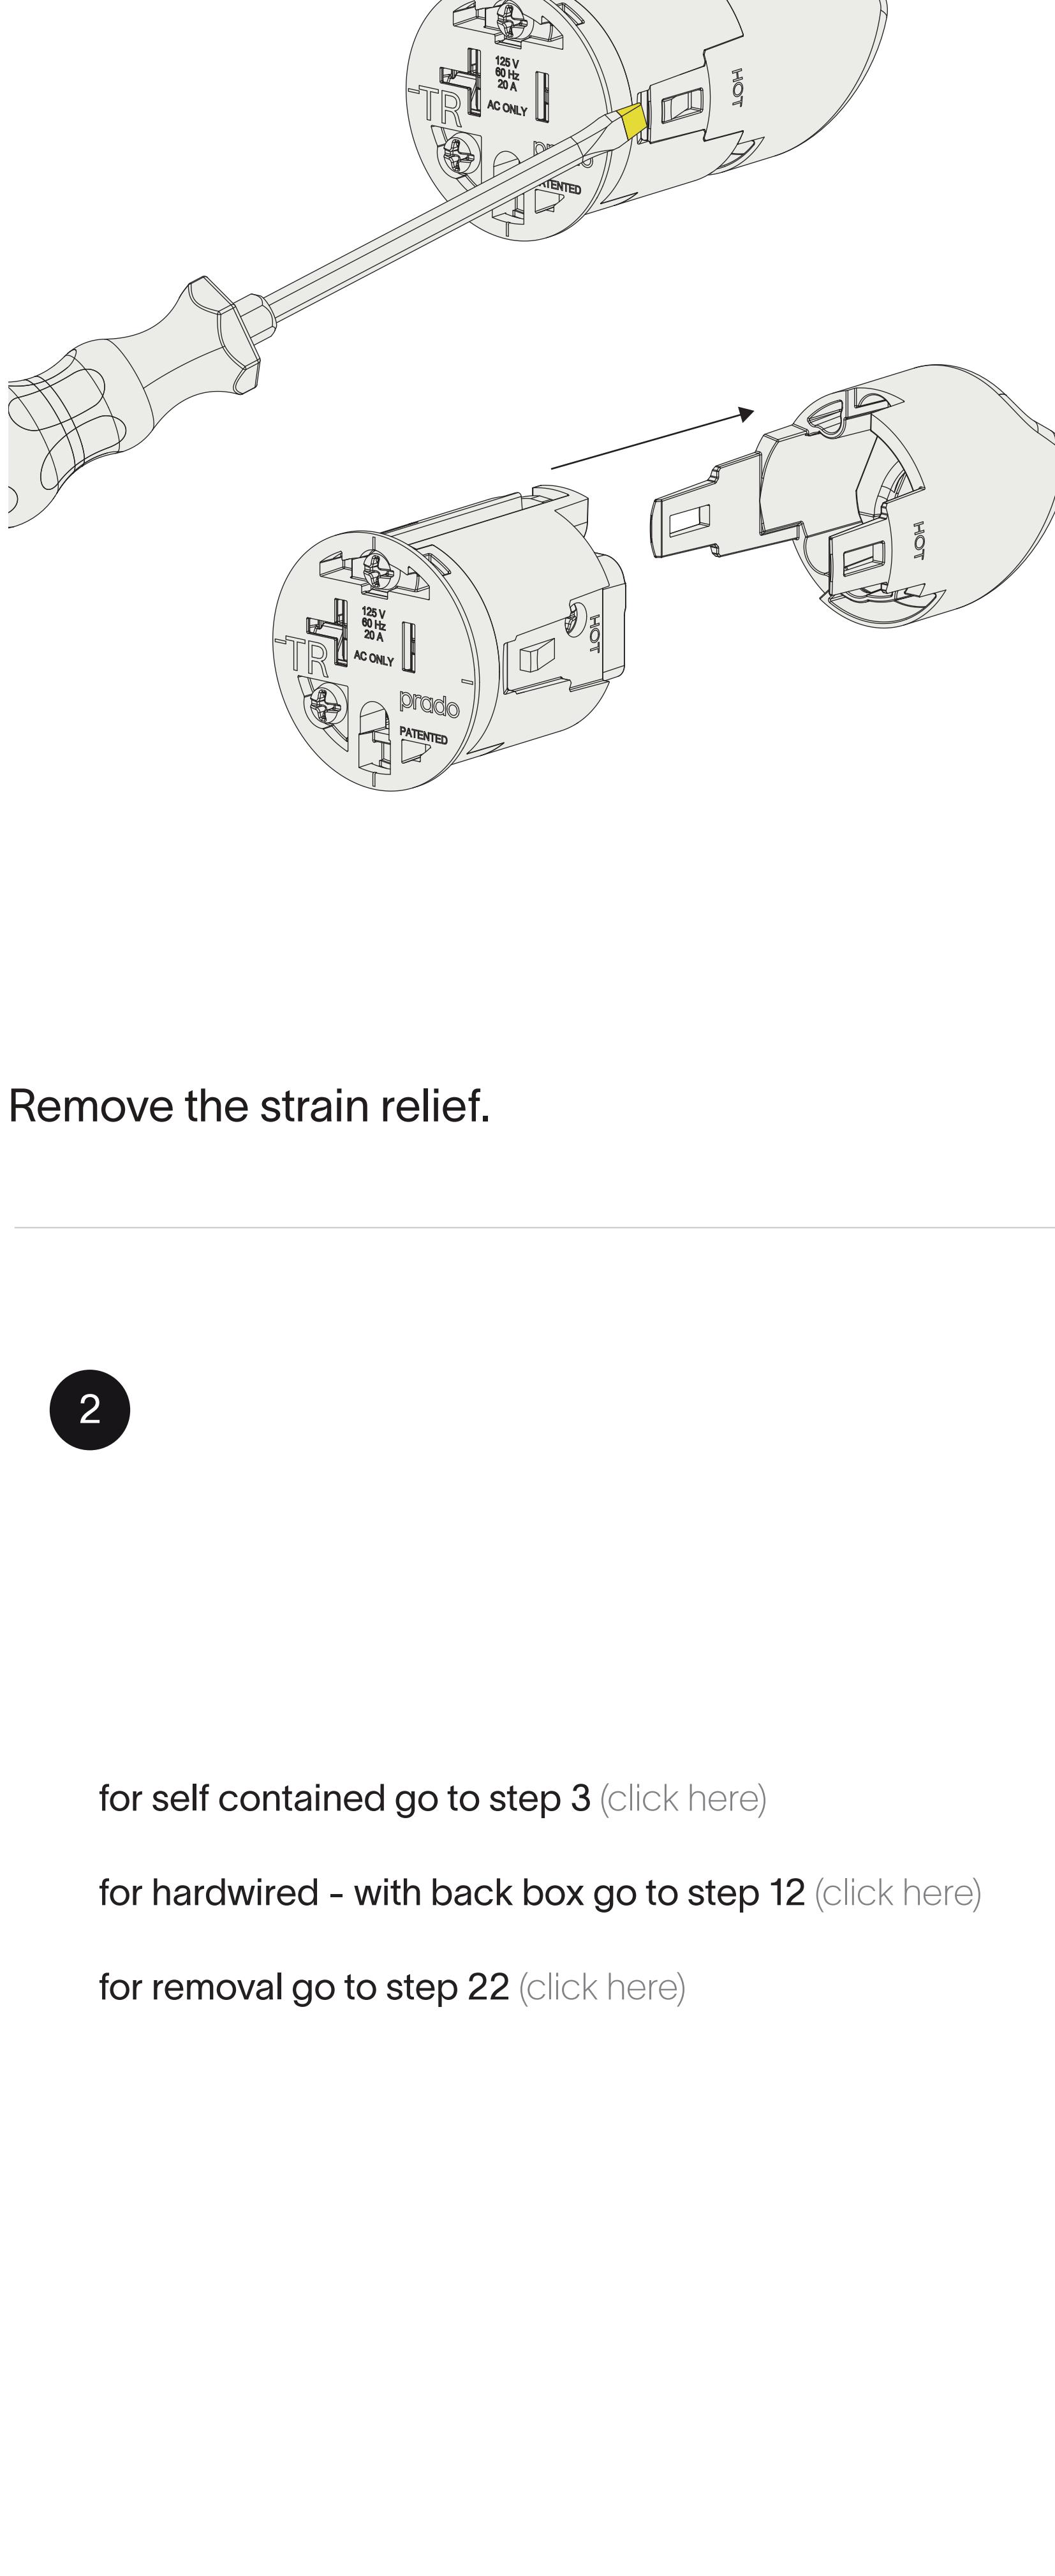

Remove the strain relief.

---


2

for self contained go to step 3 ([click here](#))

for hardwired - with back box go to step 12 ([click here](#))



for removal go to step 22 ([click here](#))

3 self contained

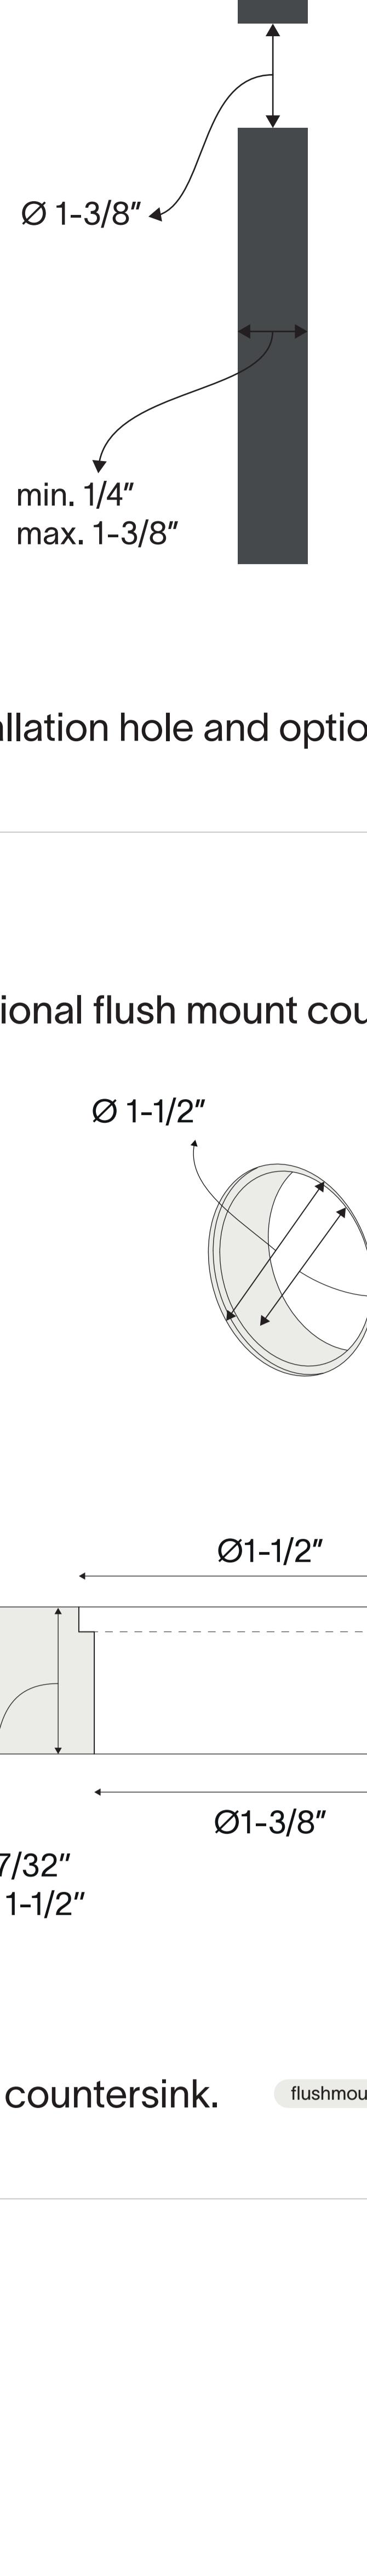

Drill the installation hole and optional countersink.


4 optional flush mount countersink

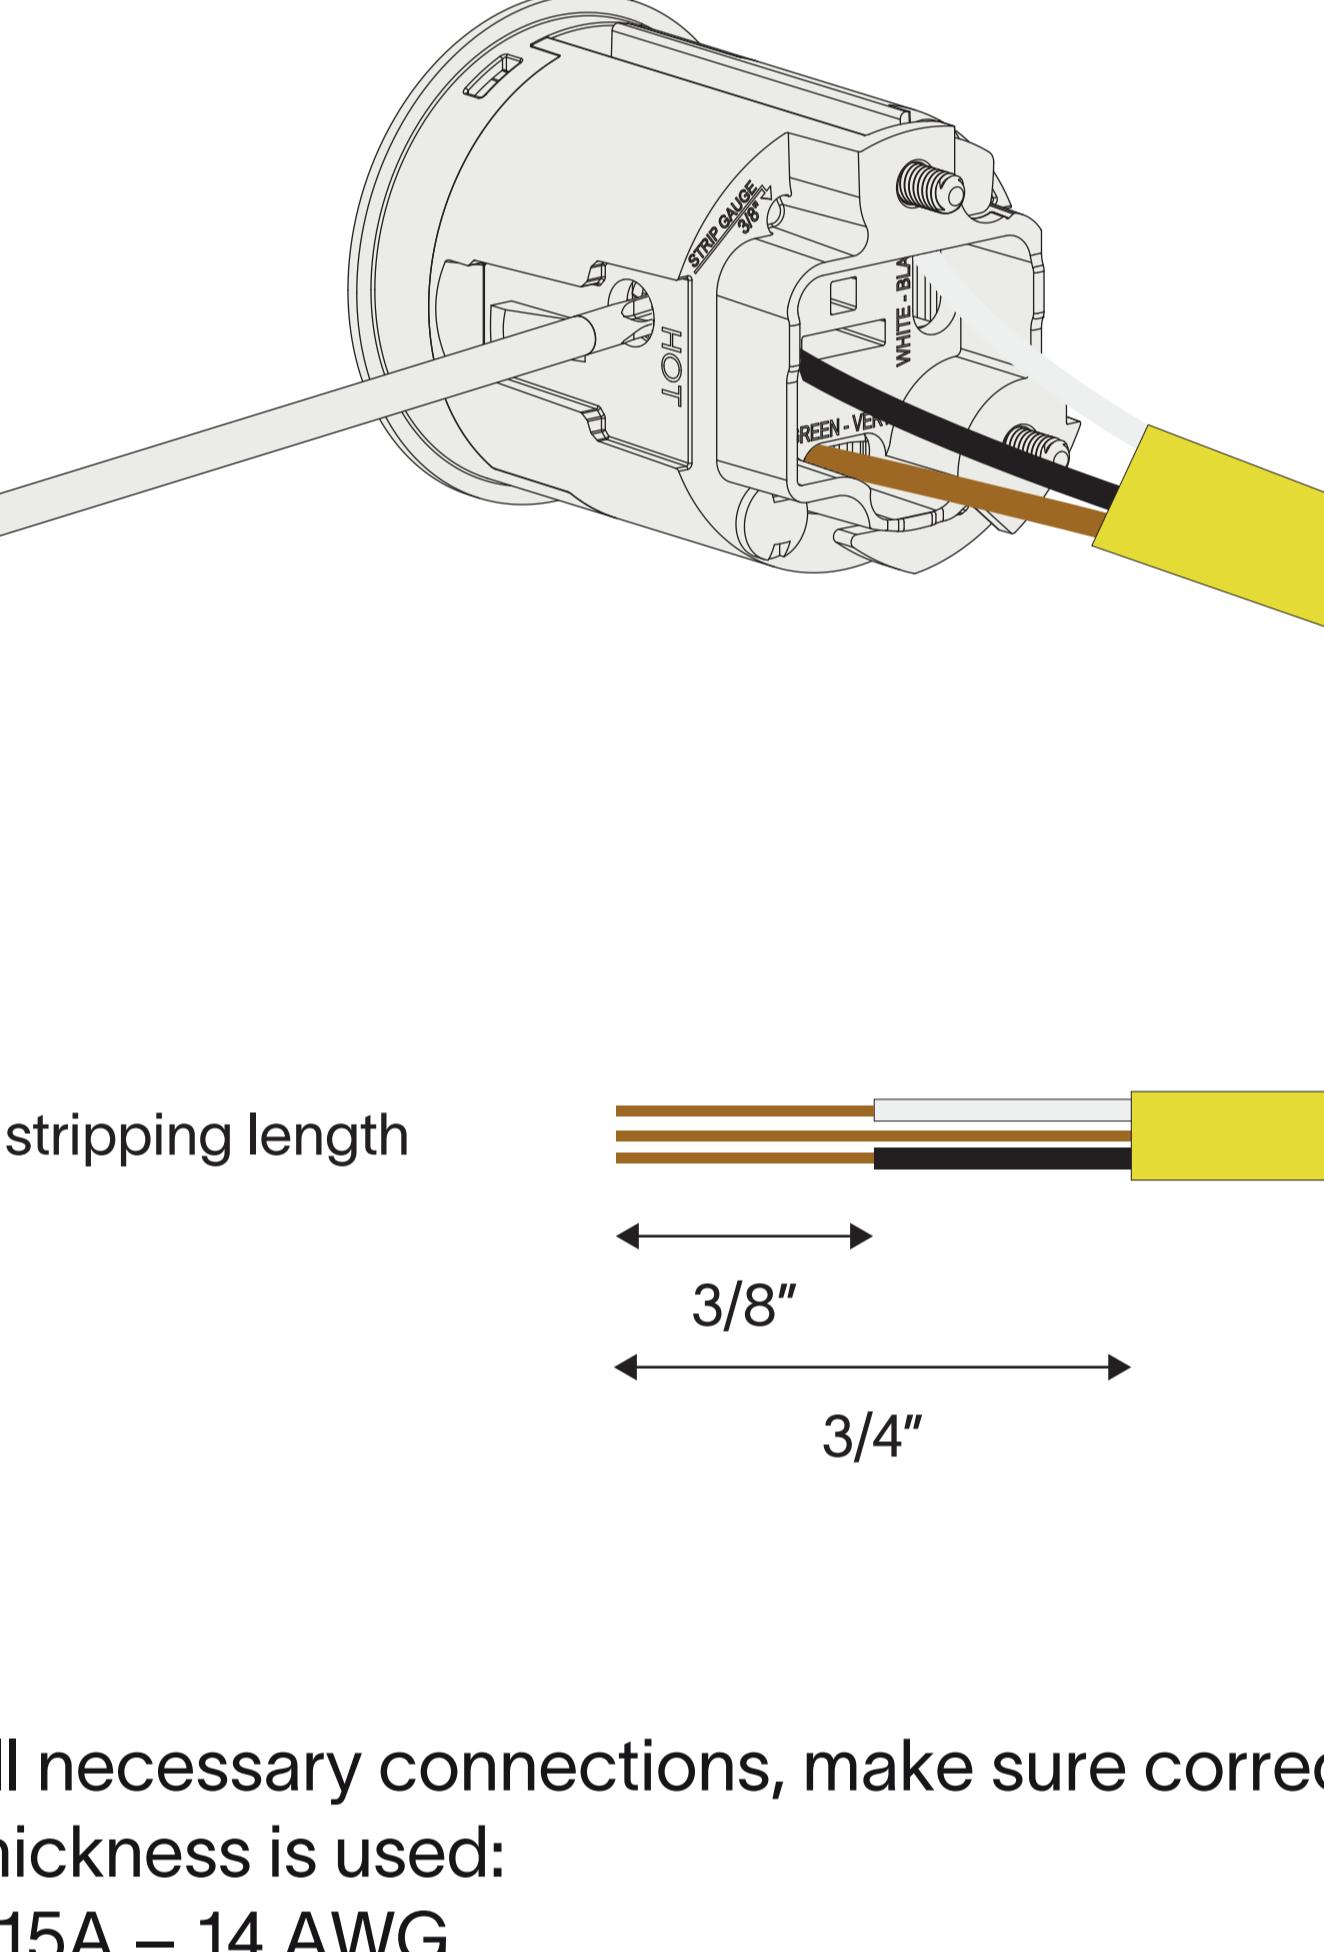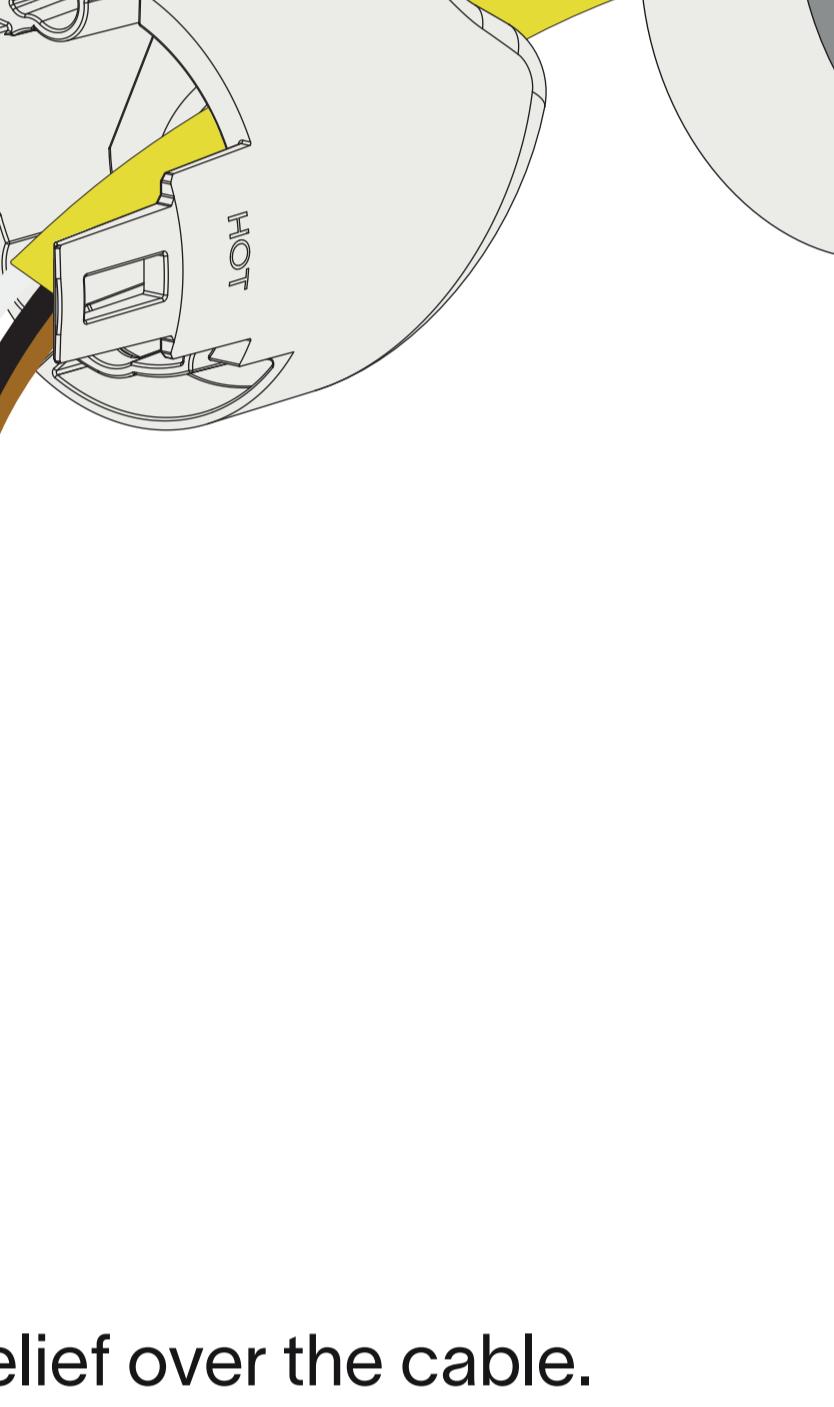

Flush mount countersink.


[flushmount countersink guideline](#)

5

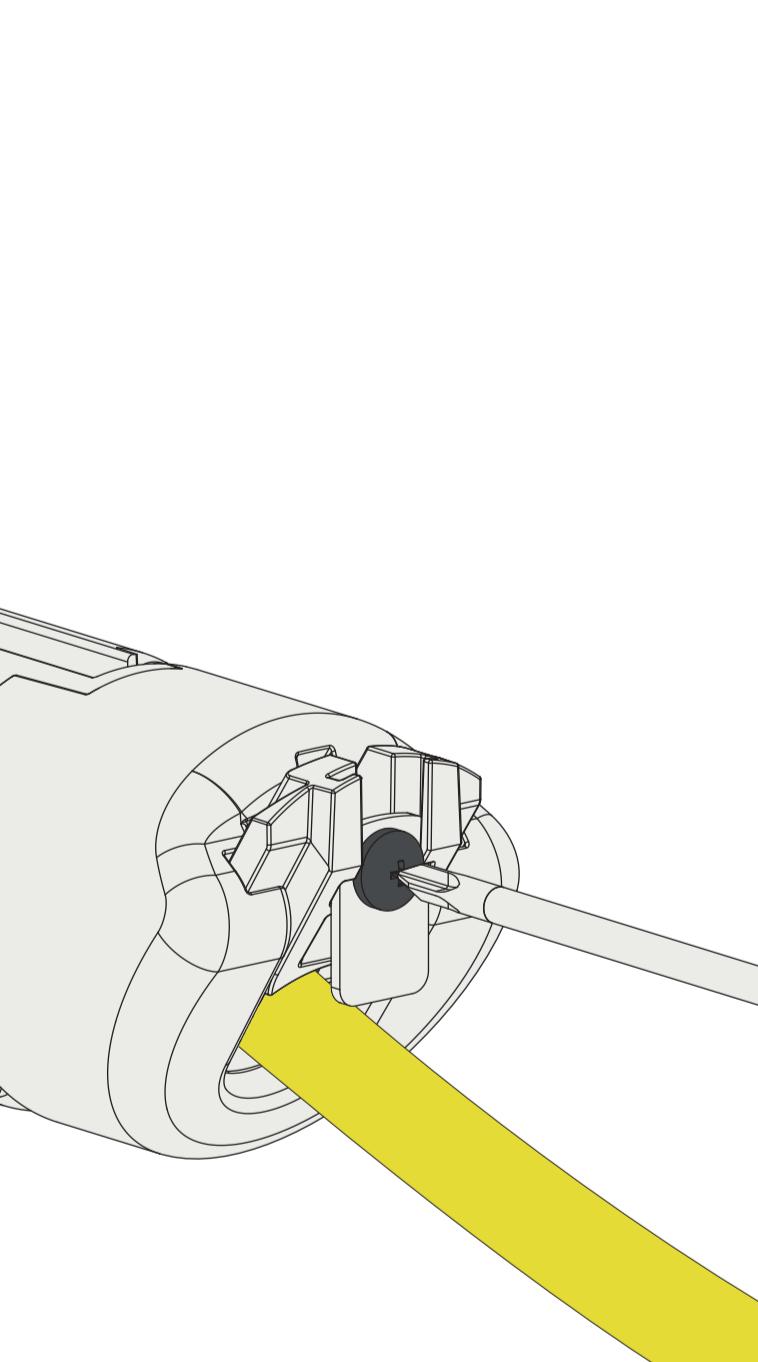


Turn the power off.

6

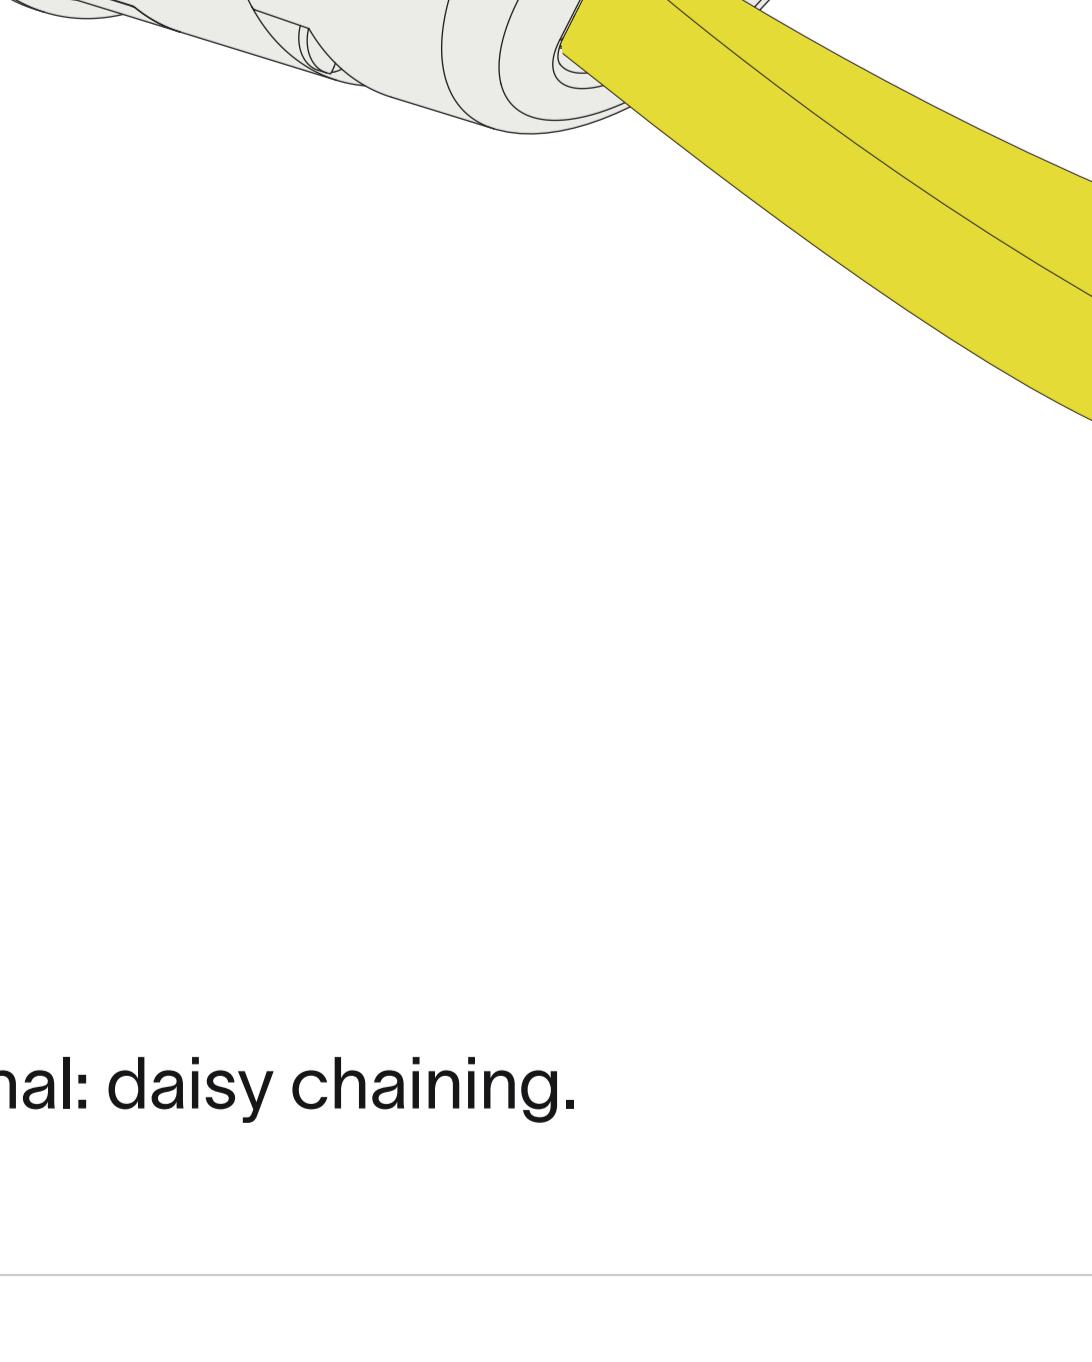


Slide the strain relief over the cable.

7

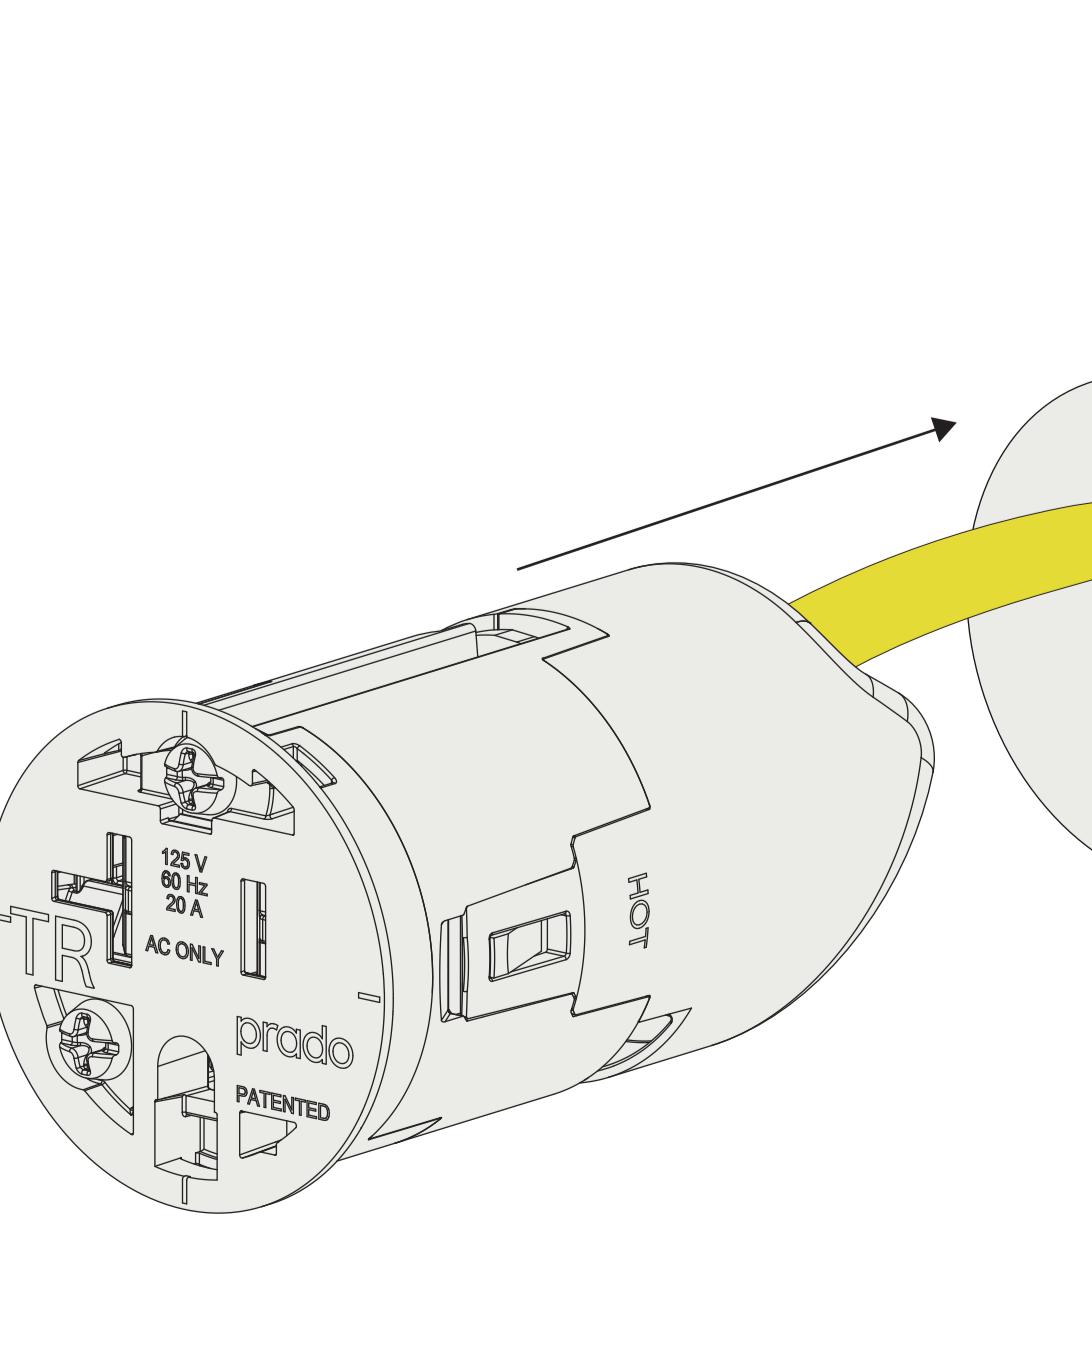

Slide the strain relief over the cable.

8

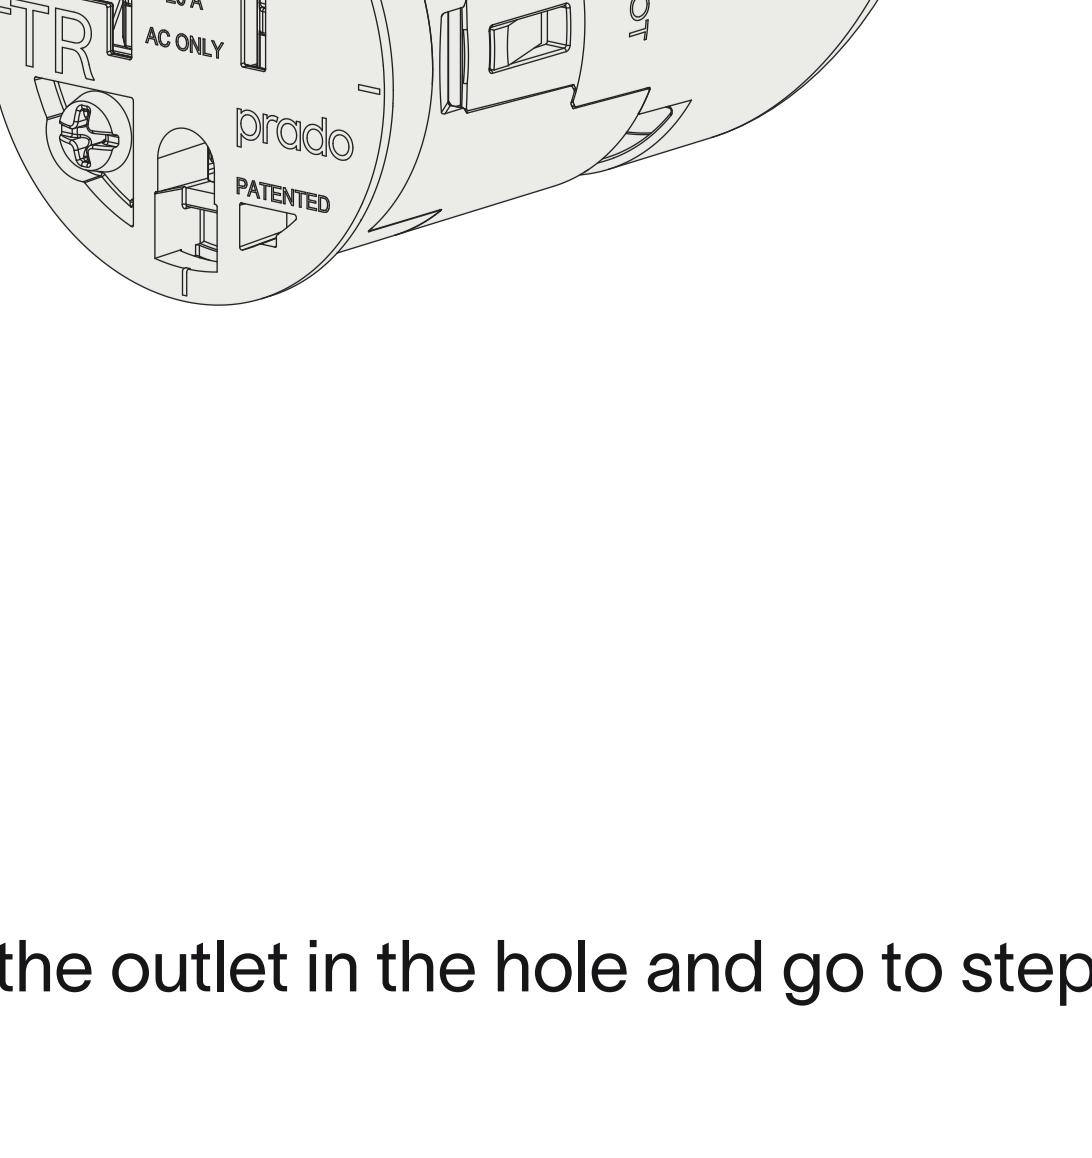

Slide the strain relief over the cable.

9



Slide the strain relief over the cable.

10



Slide the strain relief over the cable.


11




Slide the strain relief over the cable.

Insert the outlet in the hole and go to step 18 [\(click here\)](#)

10

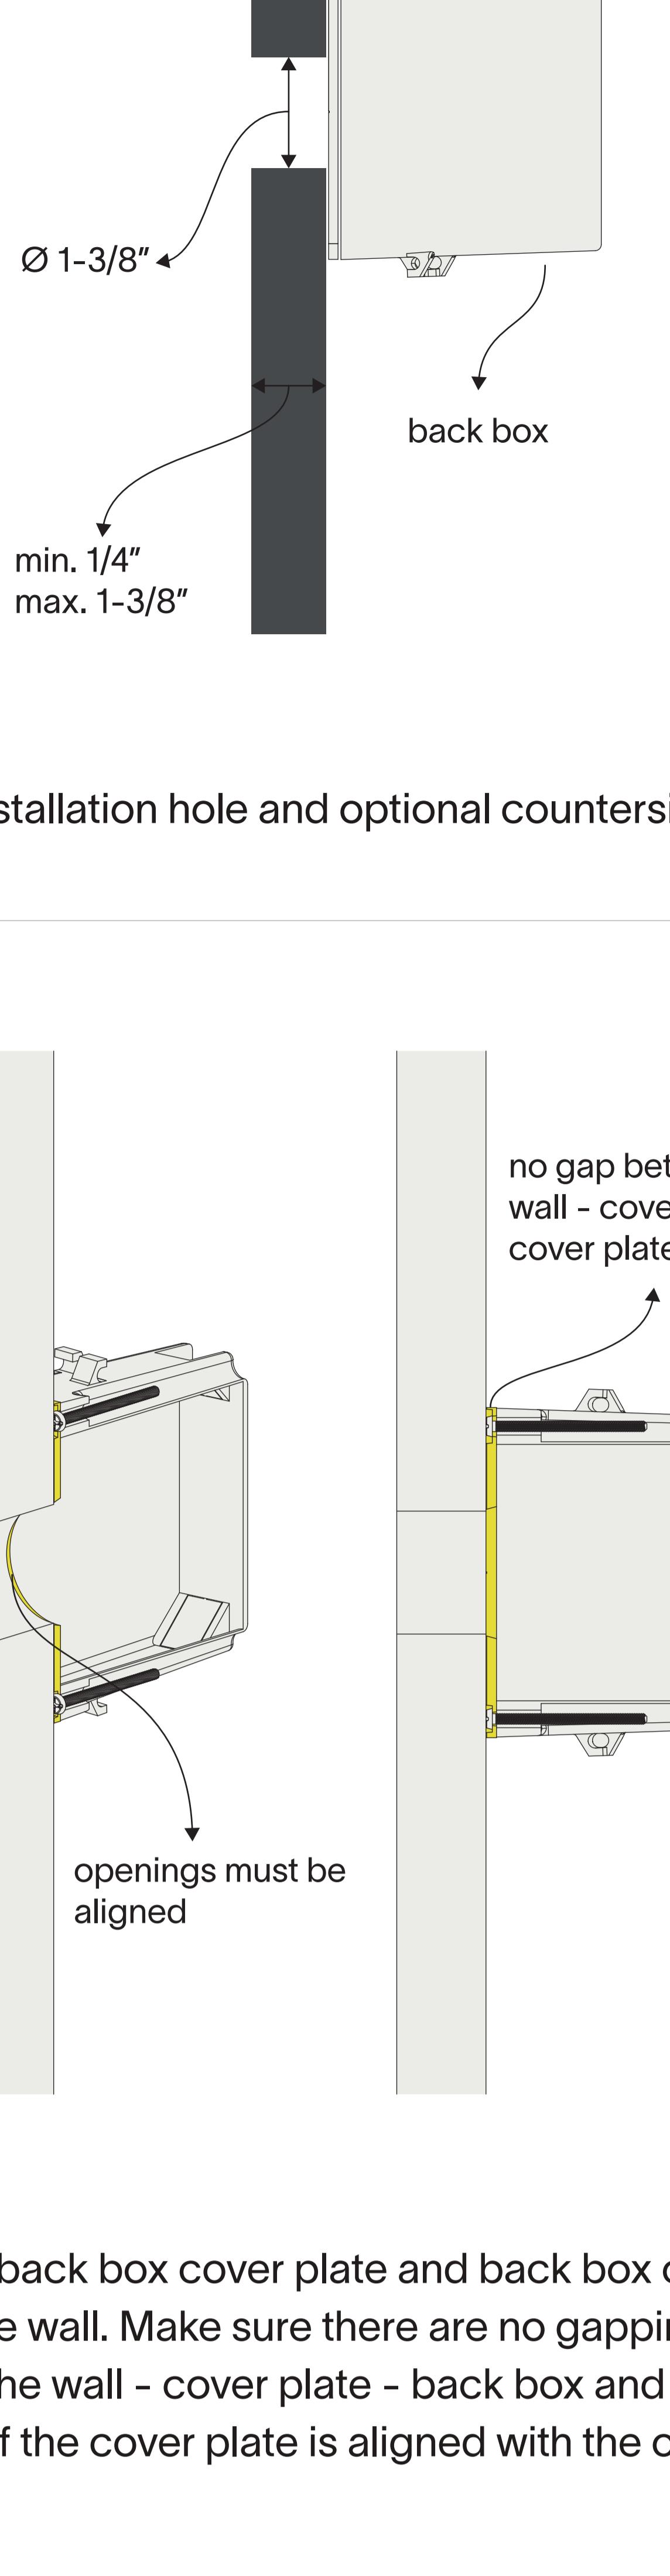


$\emptyset 1\frac{1}{2}''$

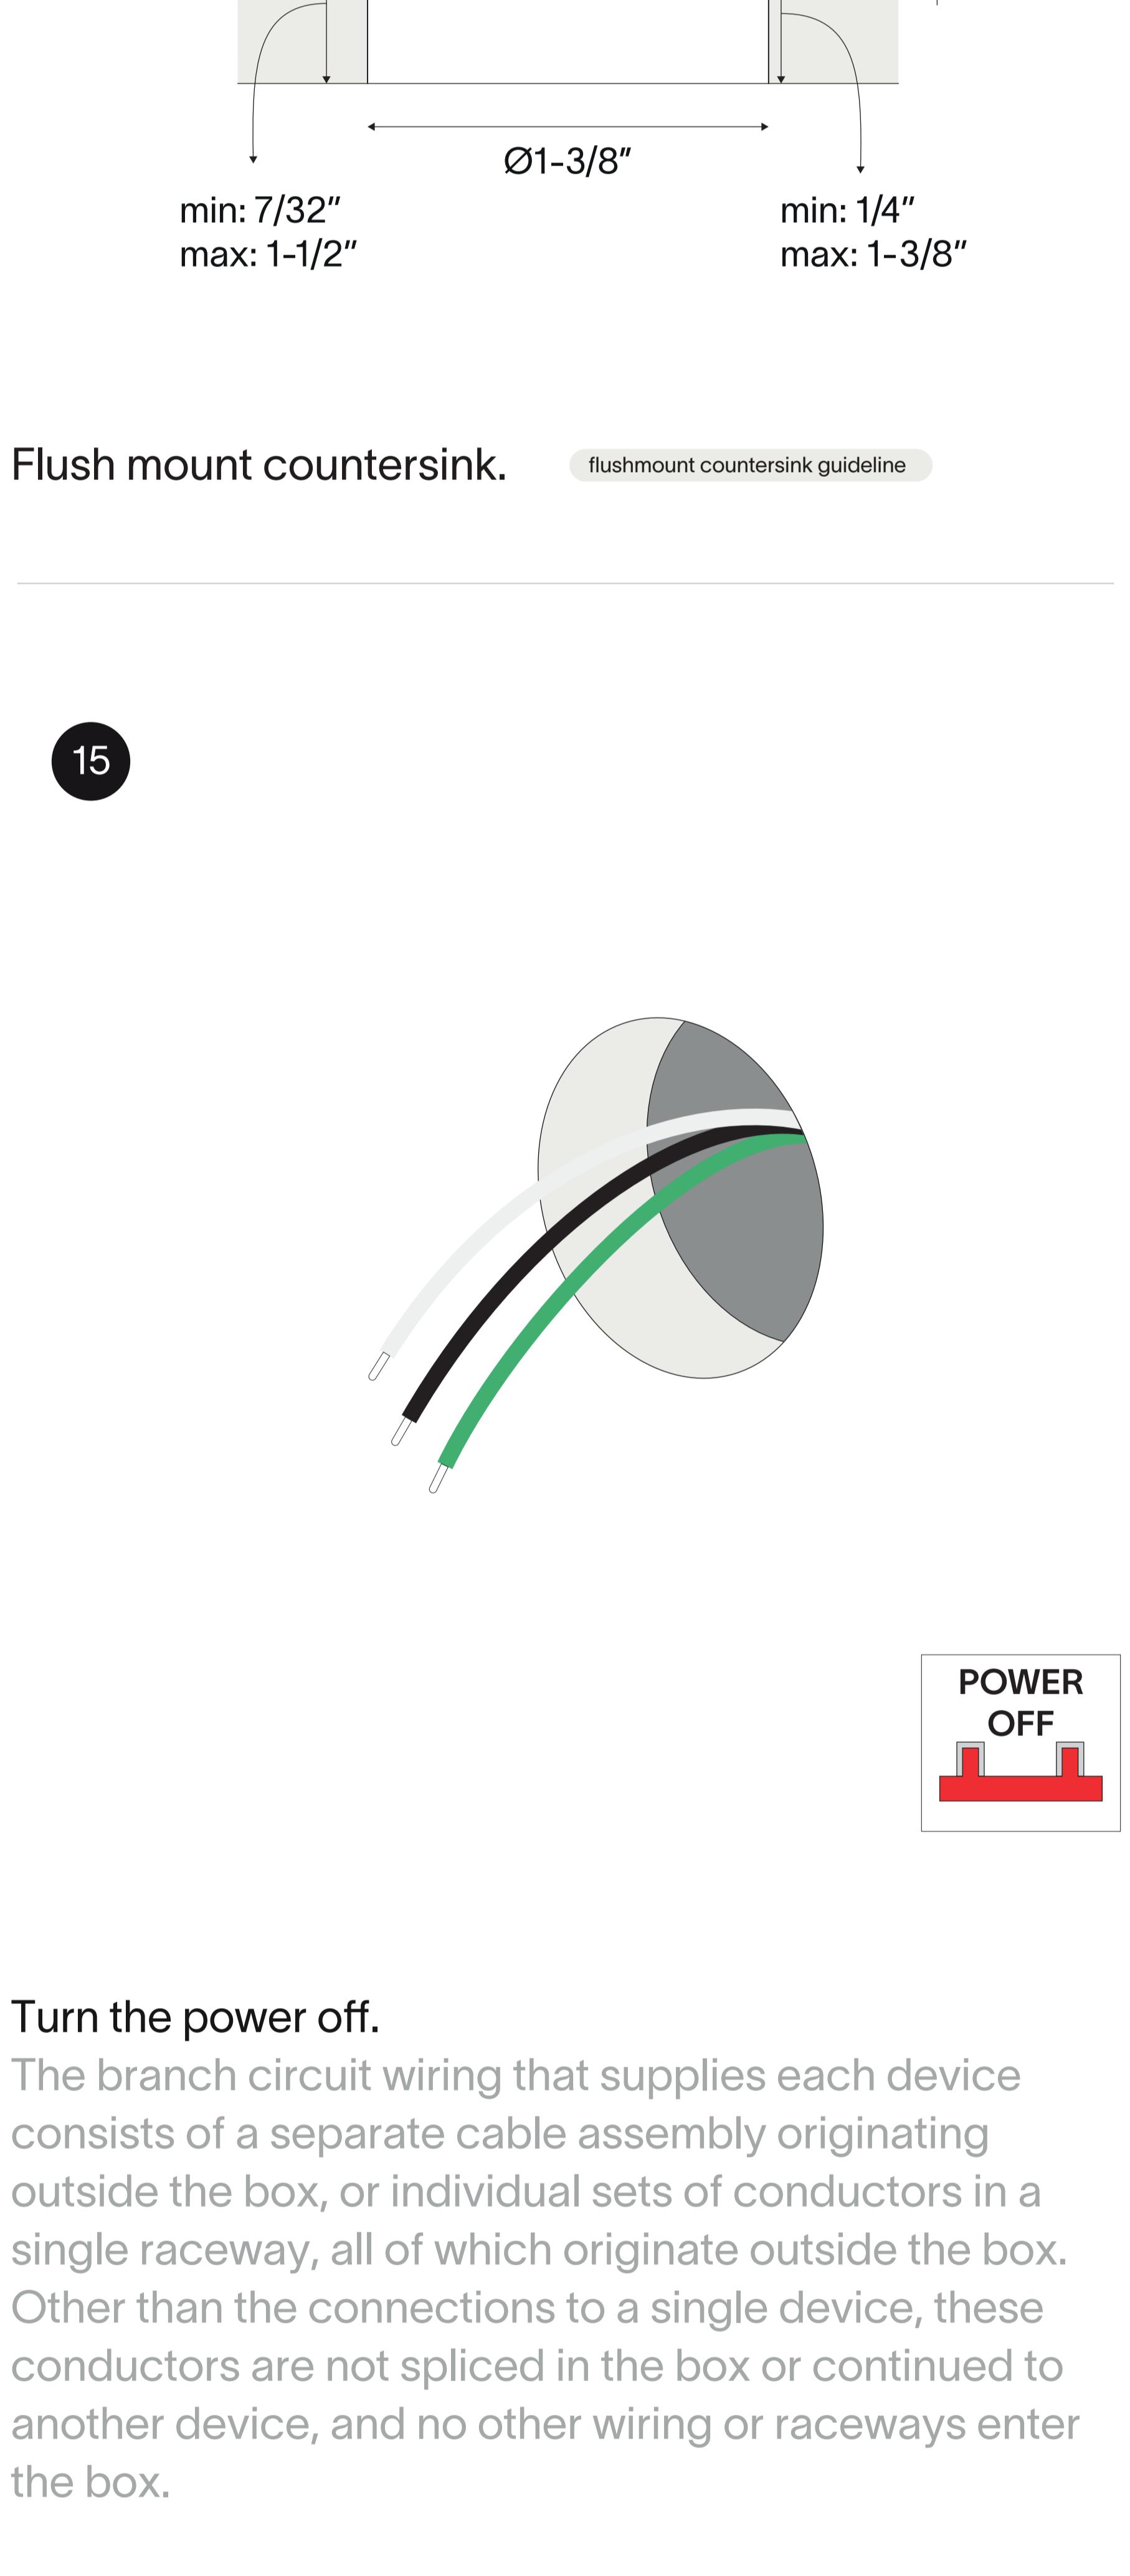


# For Metal Box Installation


## installation:

device box.  
nch circuit's equip

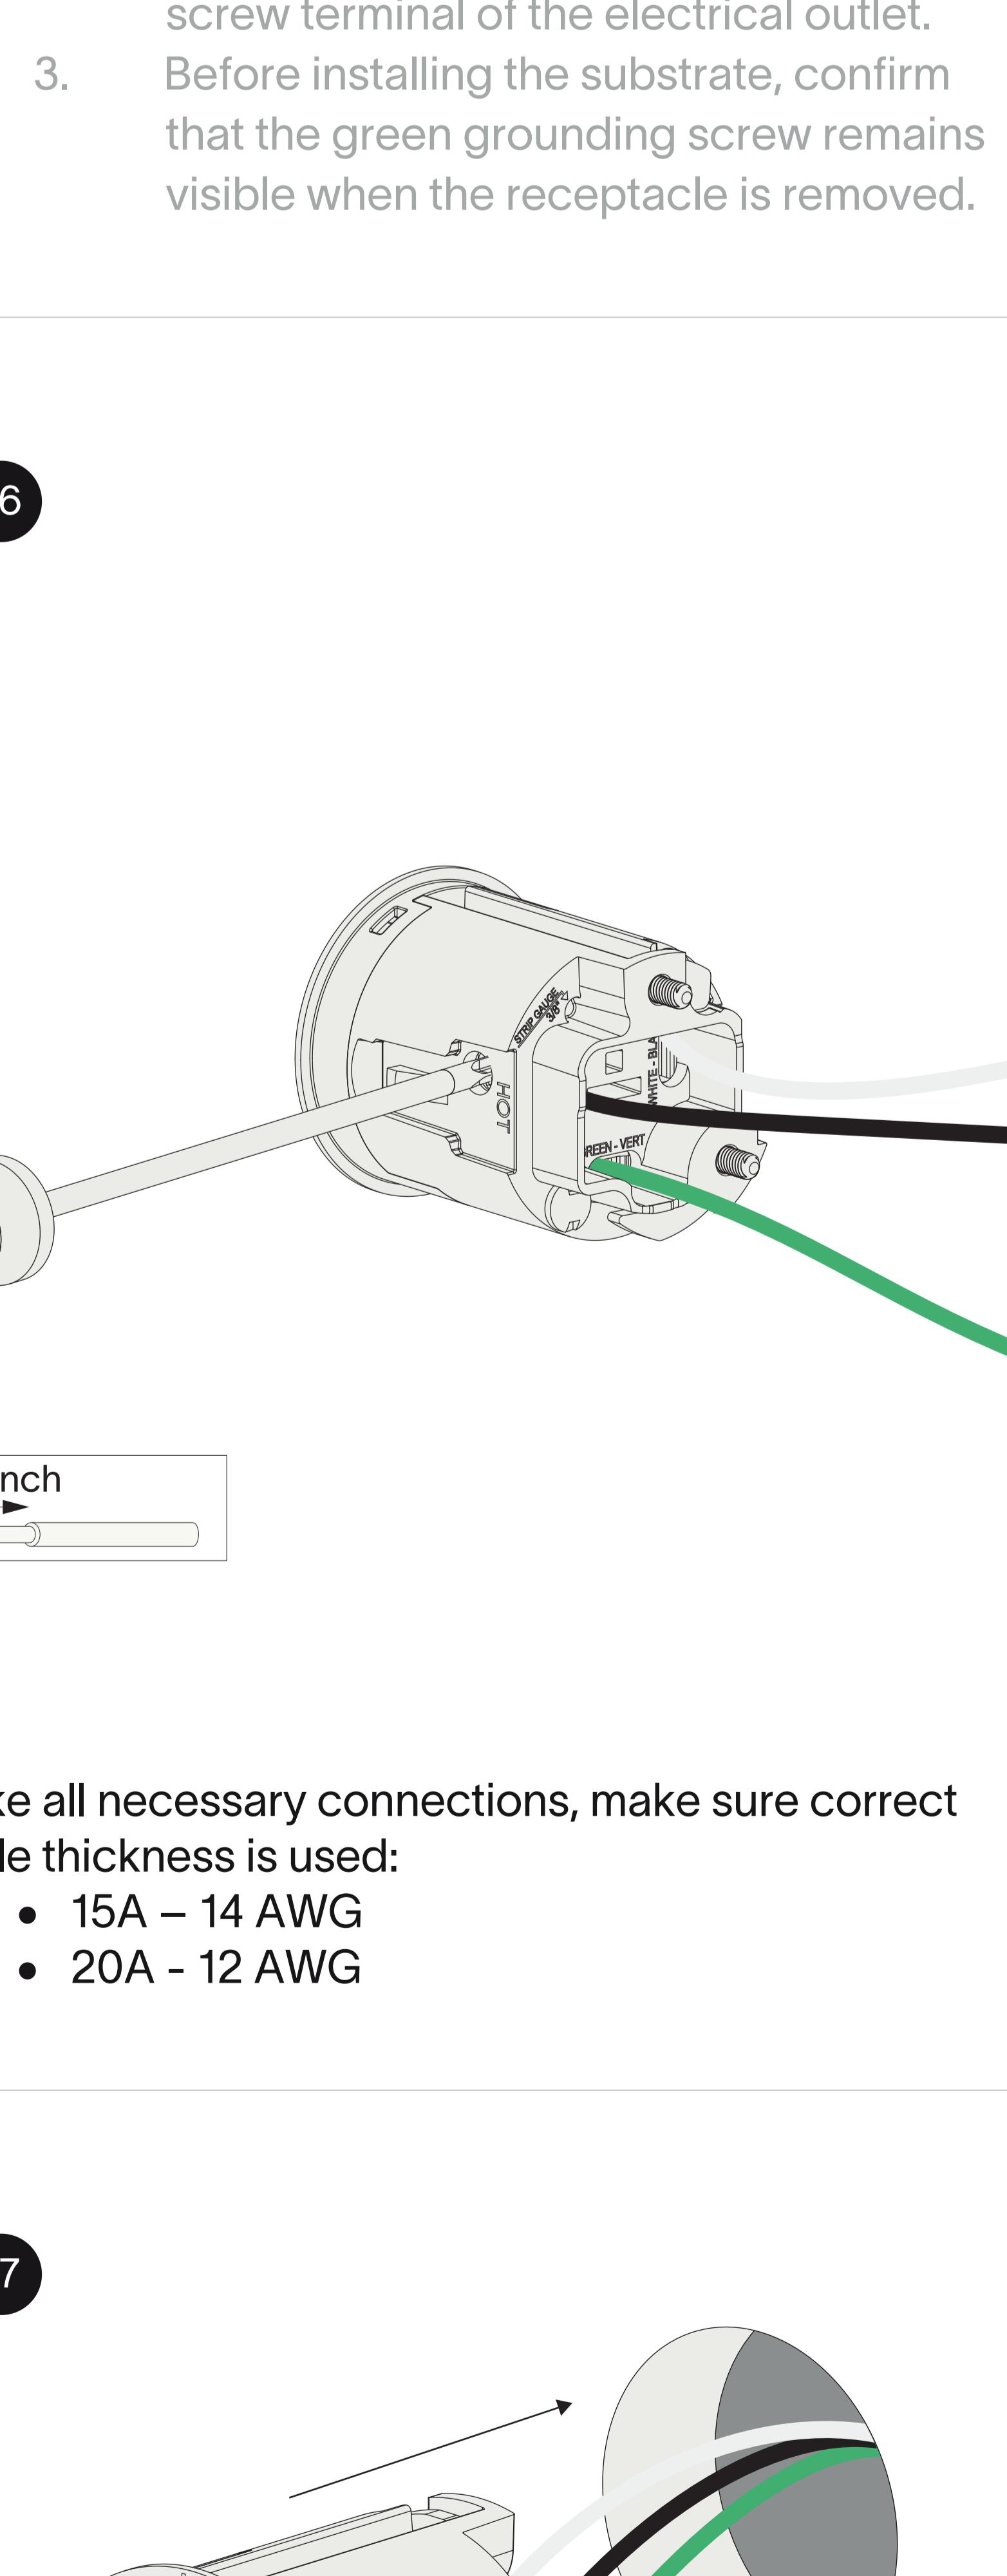

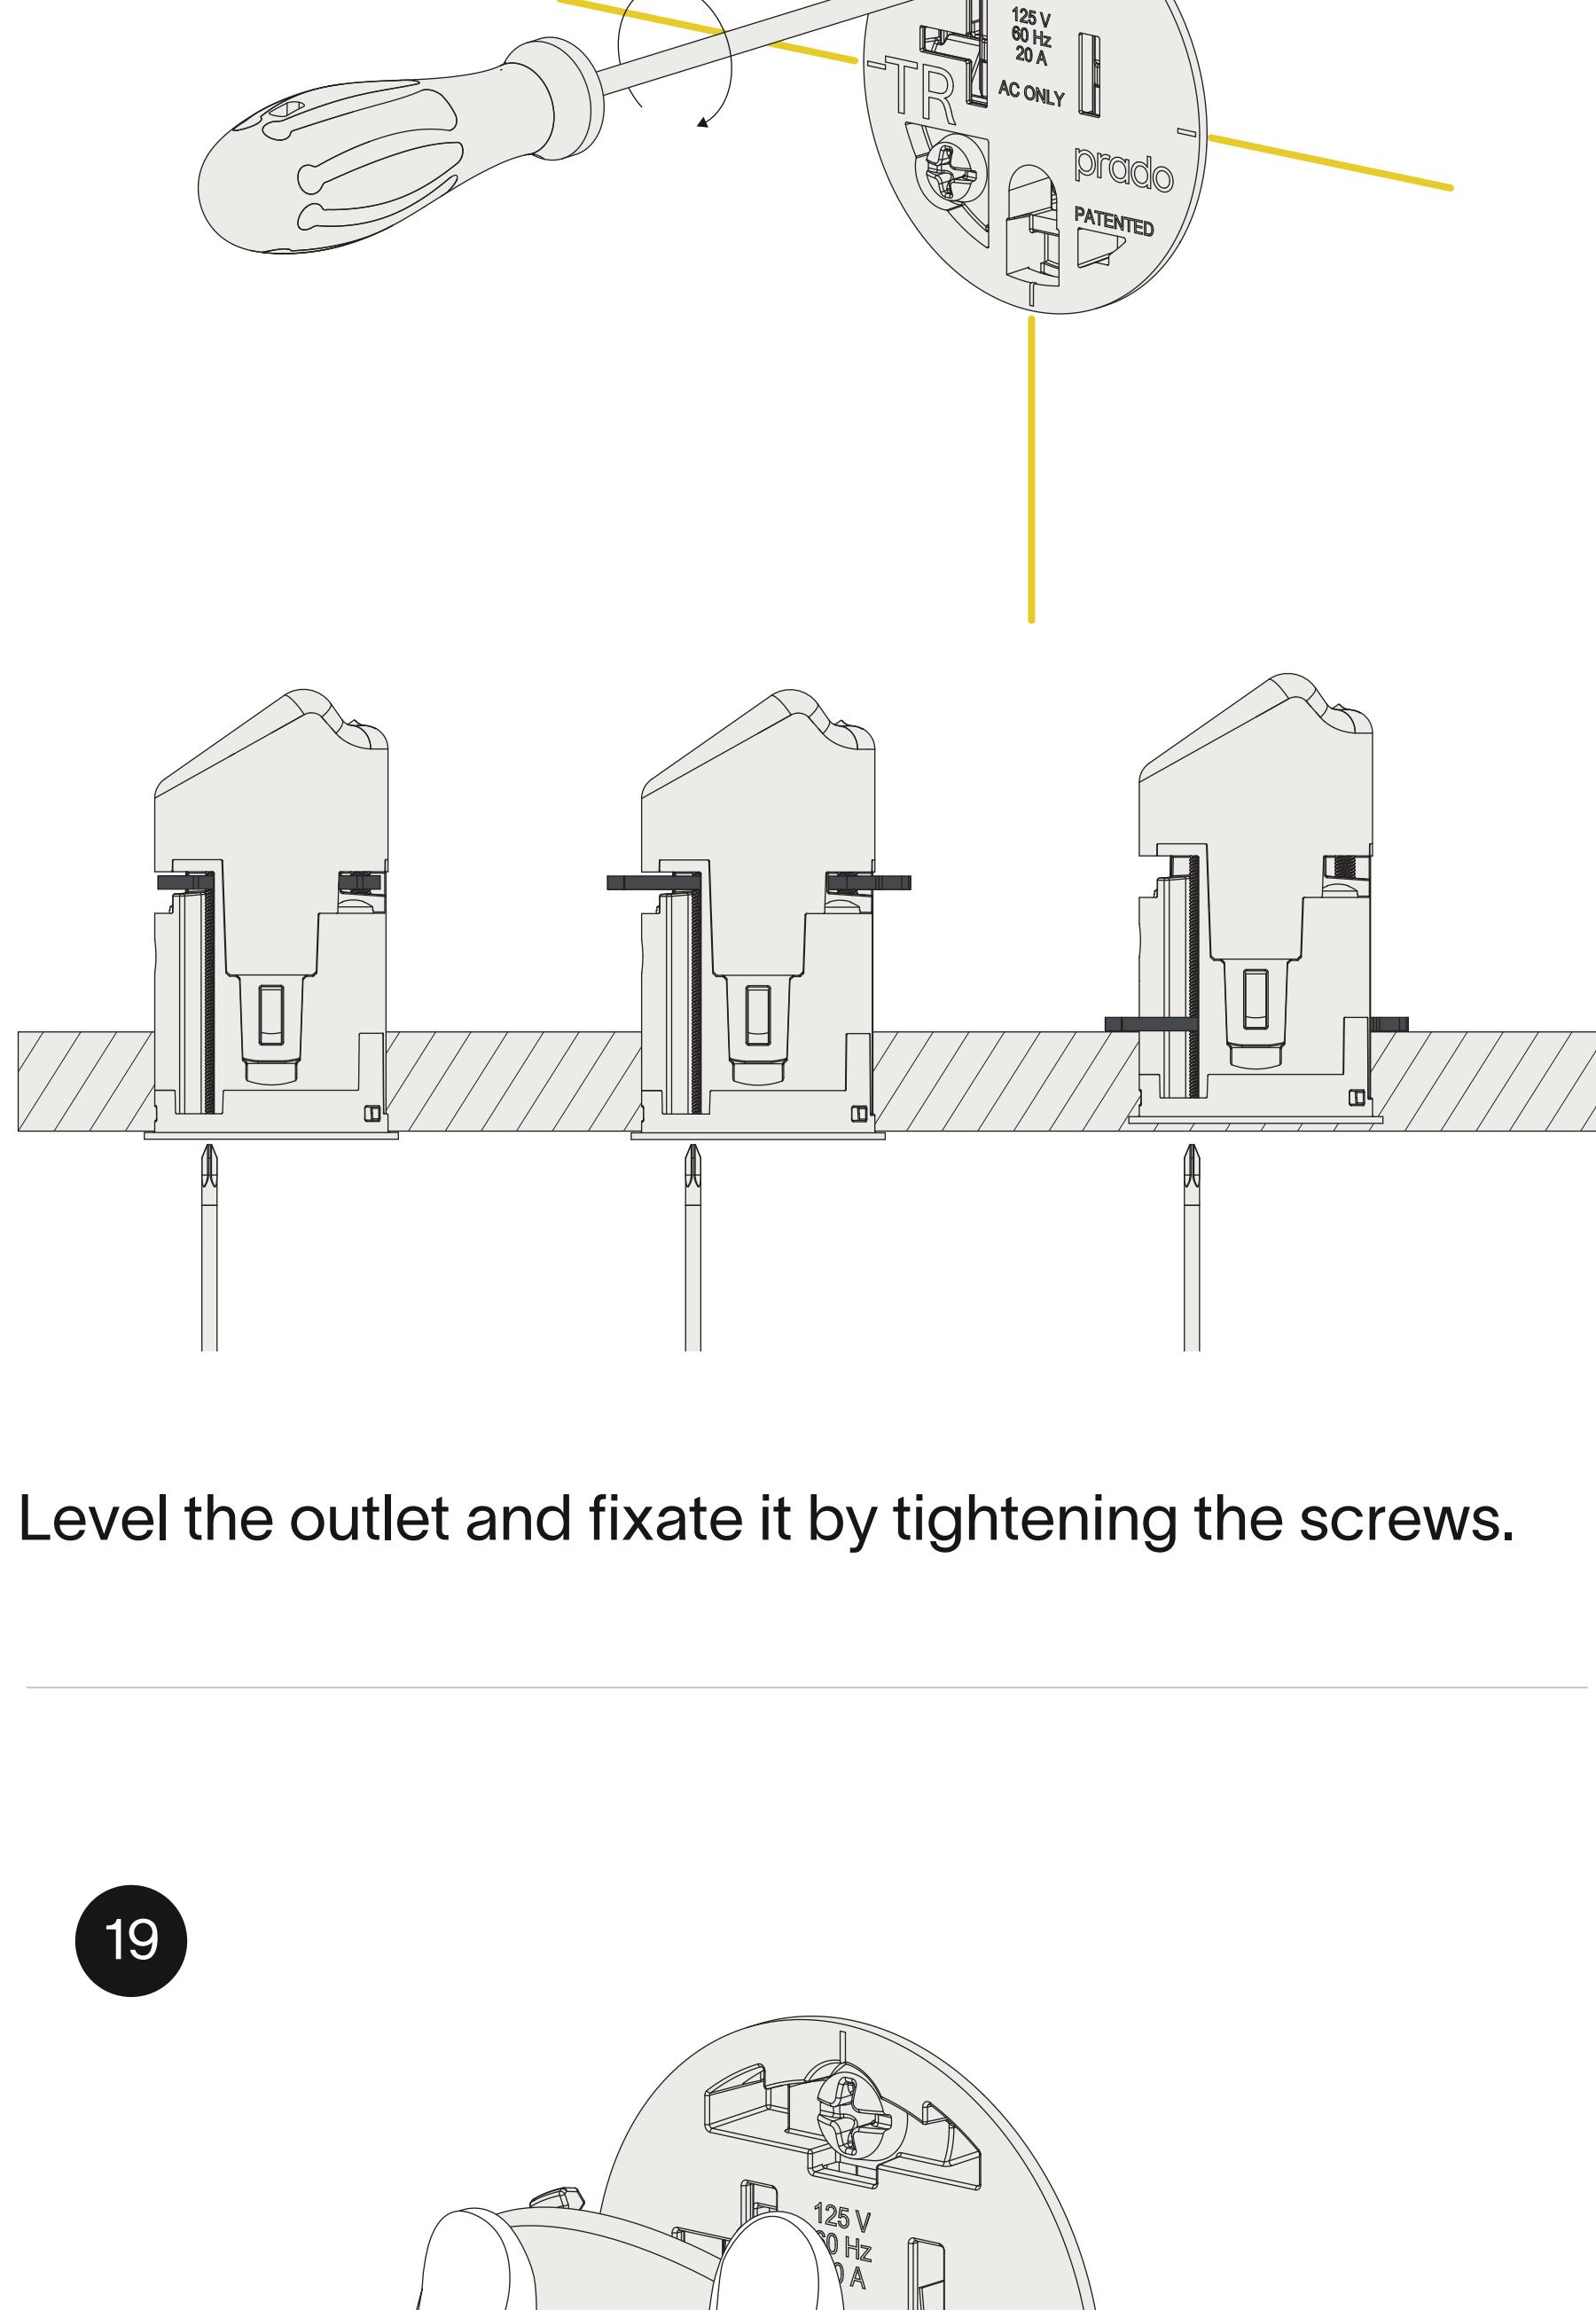

&lt;div[]({"x": 0, "y": 0, "x2": 100, "y2": 100} !!{"x": 0, "y": 0, "x2": 100, "y2": 100} !!{"x": 0, "y": 0, "x2": 100, "y2": 100}

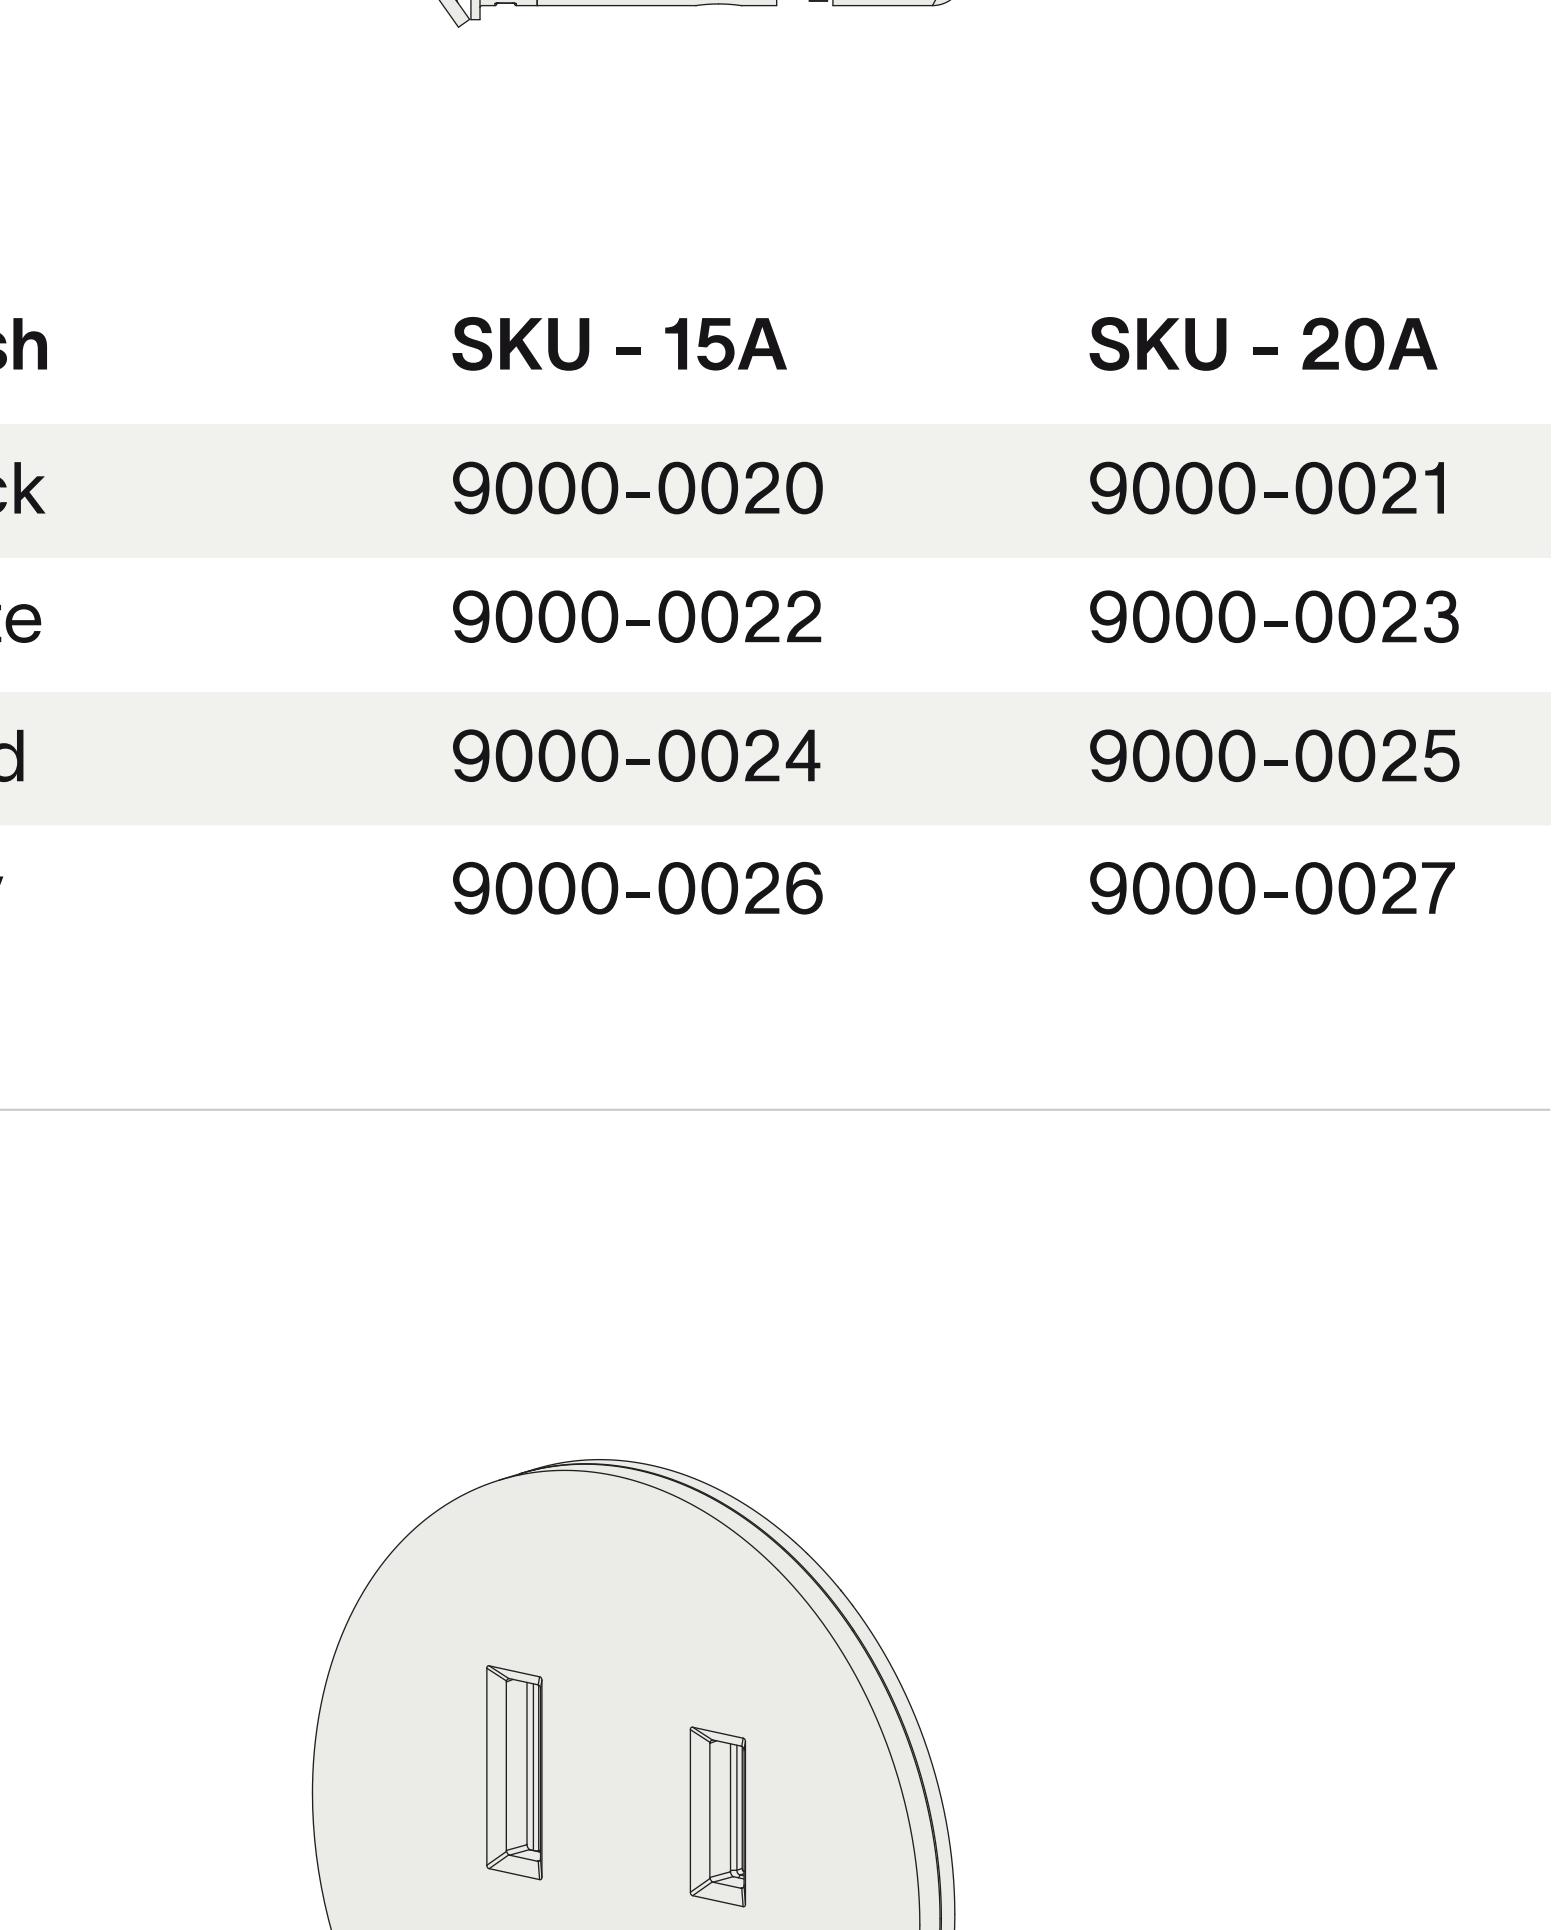

A circular diagram representing a cover plate. In the center, there is a small, rectangular cutout showing internal mechanical parts, possibly a gear or a motor. The rest of the circle represents the outer edge of the cover plate.



**“click”**

A diagram showing a rectangular cover plate being attached to a base unit. The base unit has a slot and a protrusion. The cover plate is being slid into the slot, with a 'click' sound indicated by a speech bubble, signifying a successful fit.

---


Install the cover plate.

21

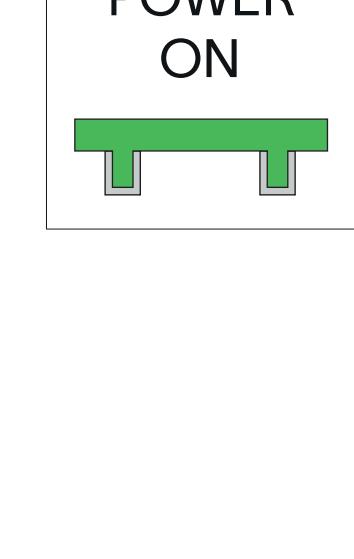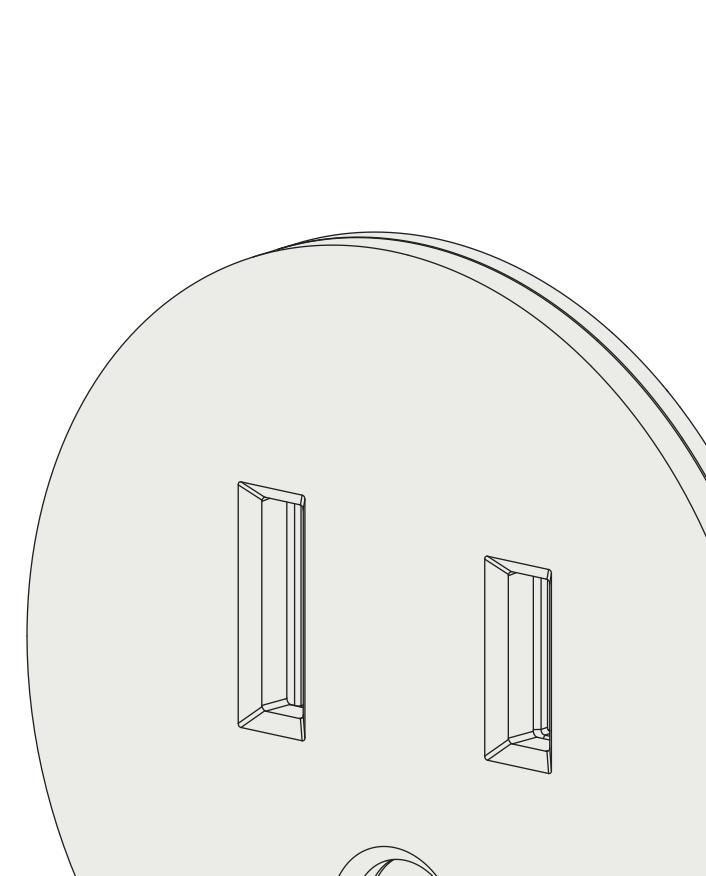


# for removal

22

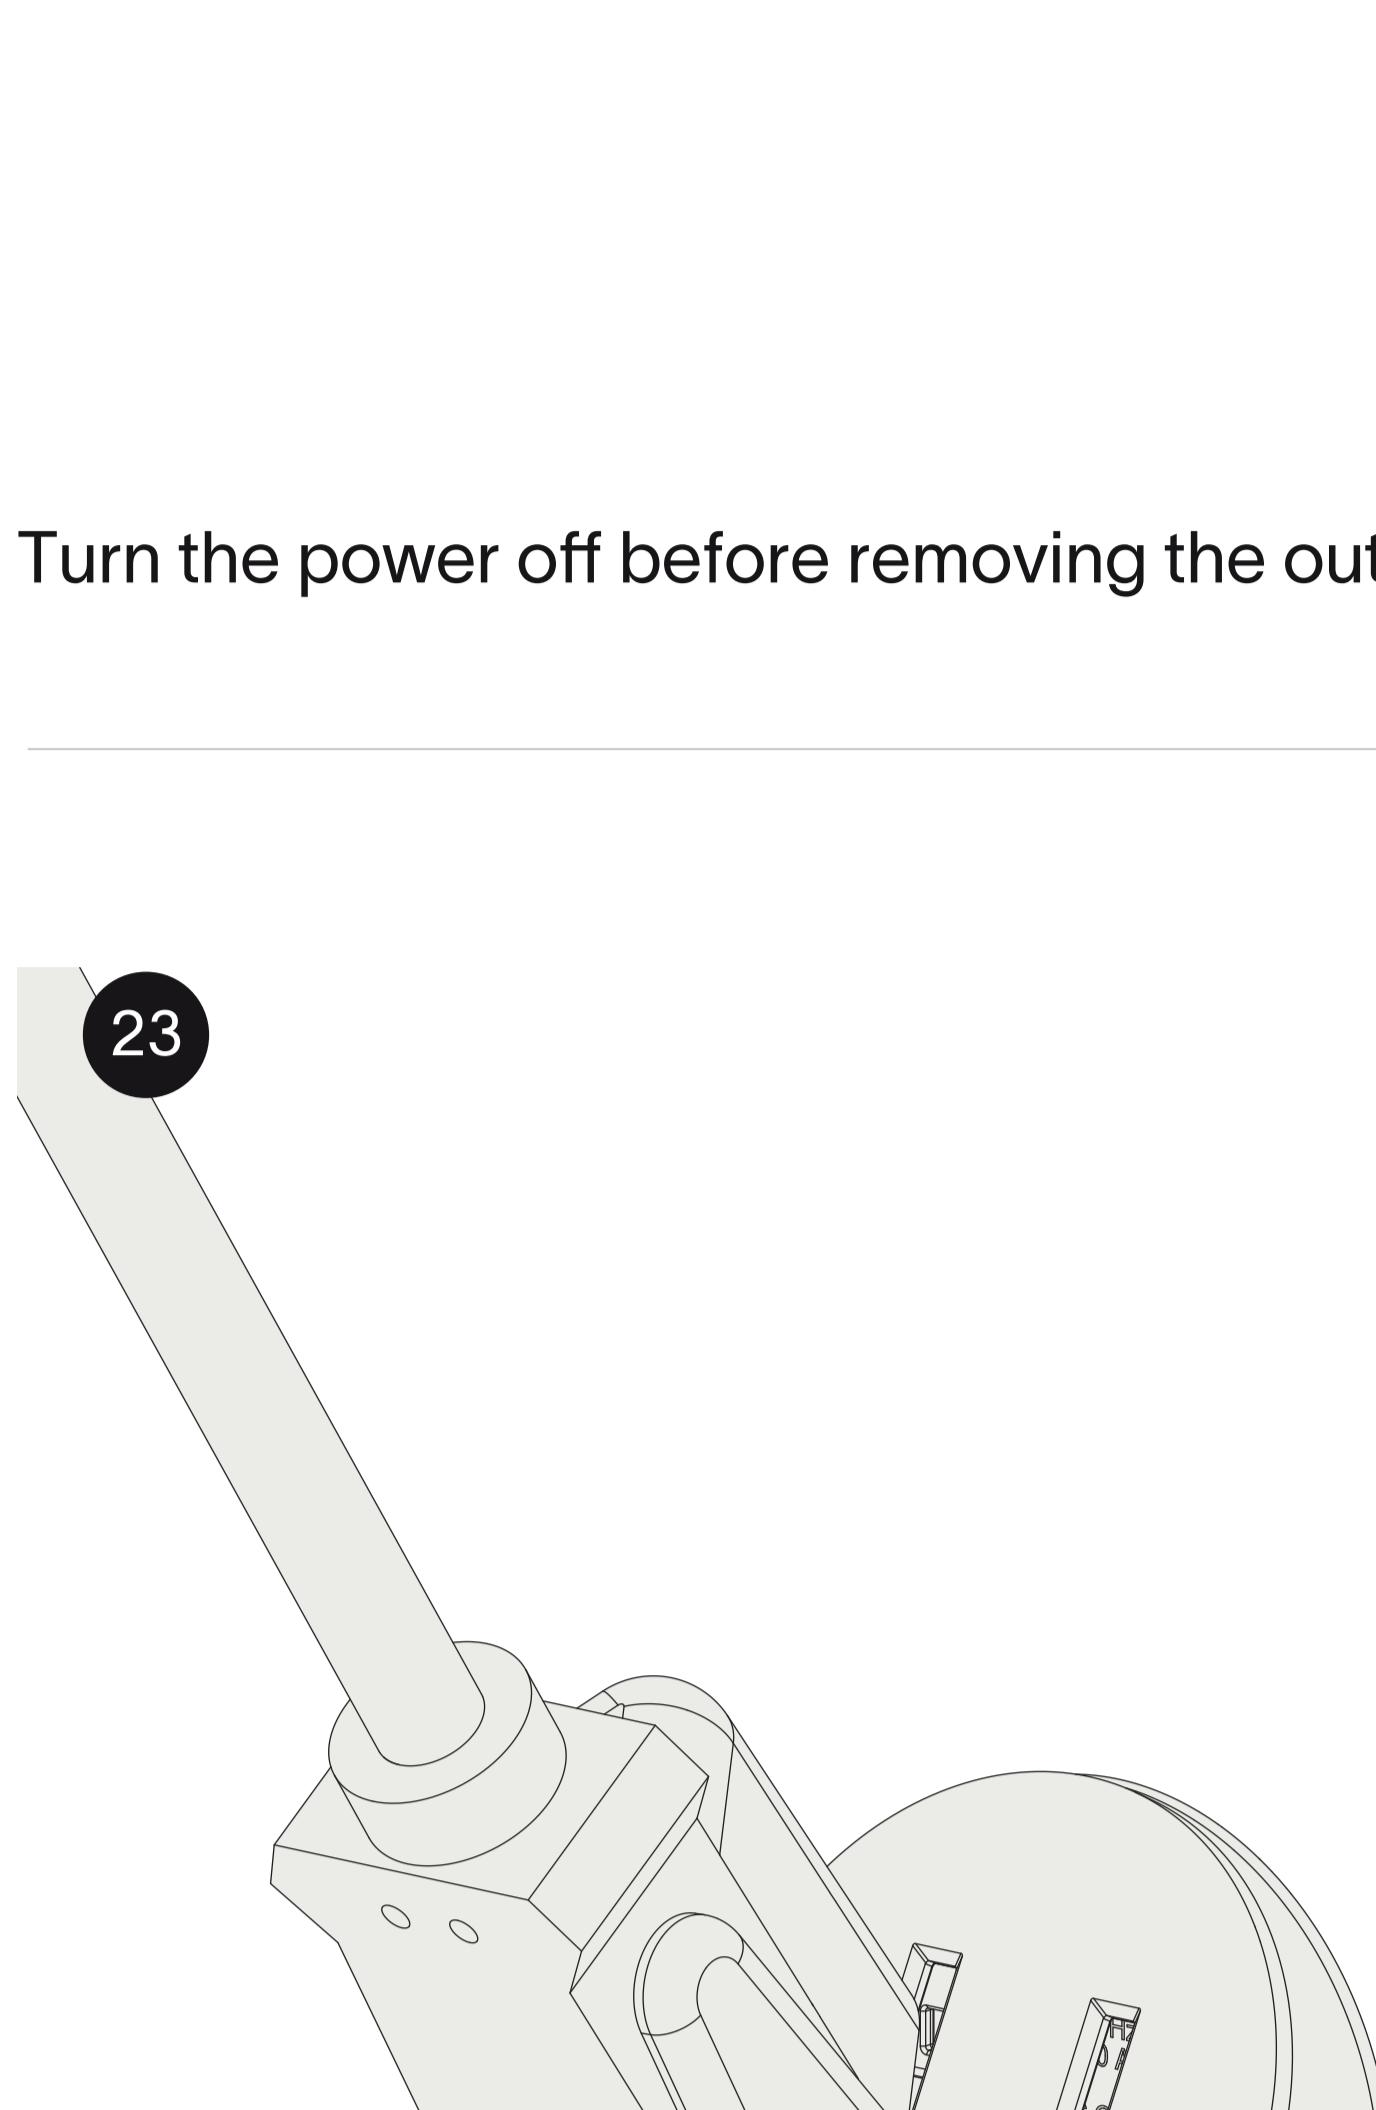


Turn the power off before removing the outlet.

23

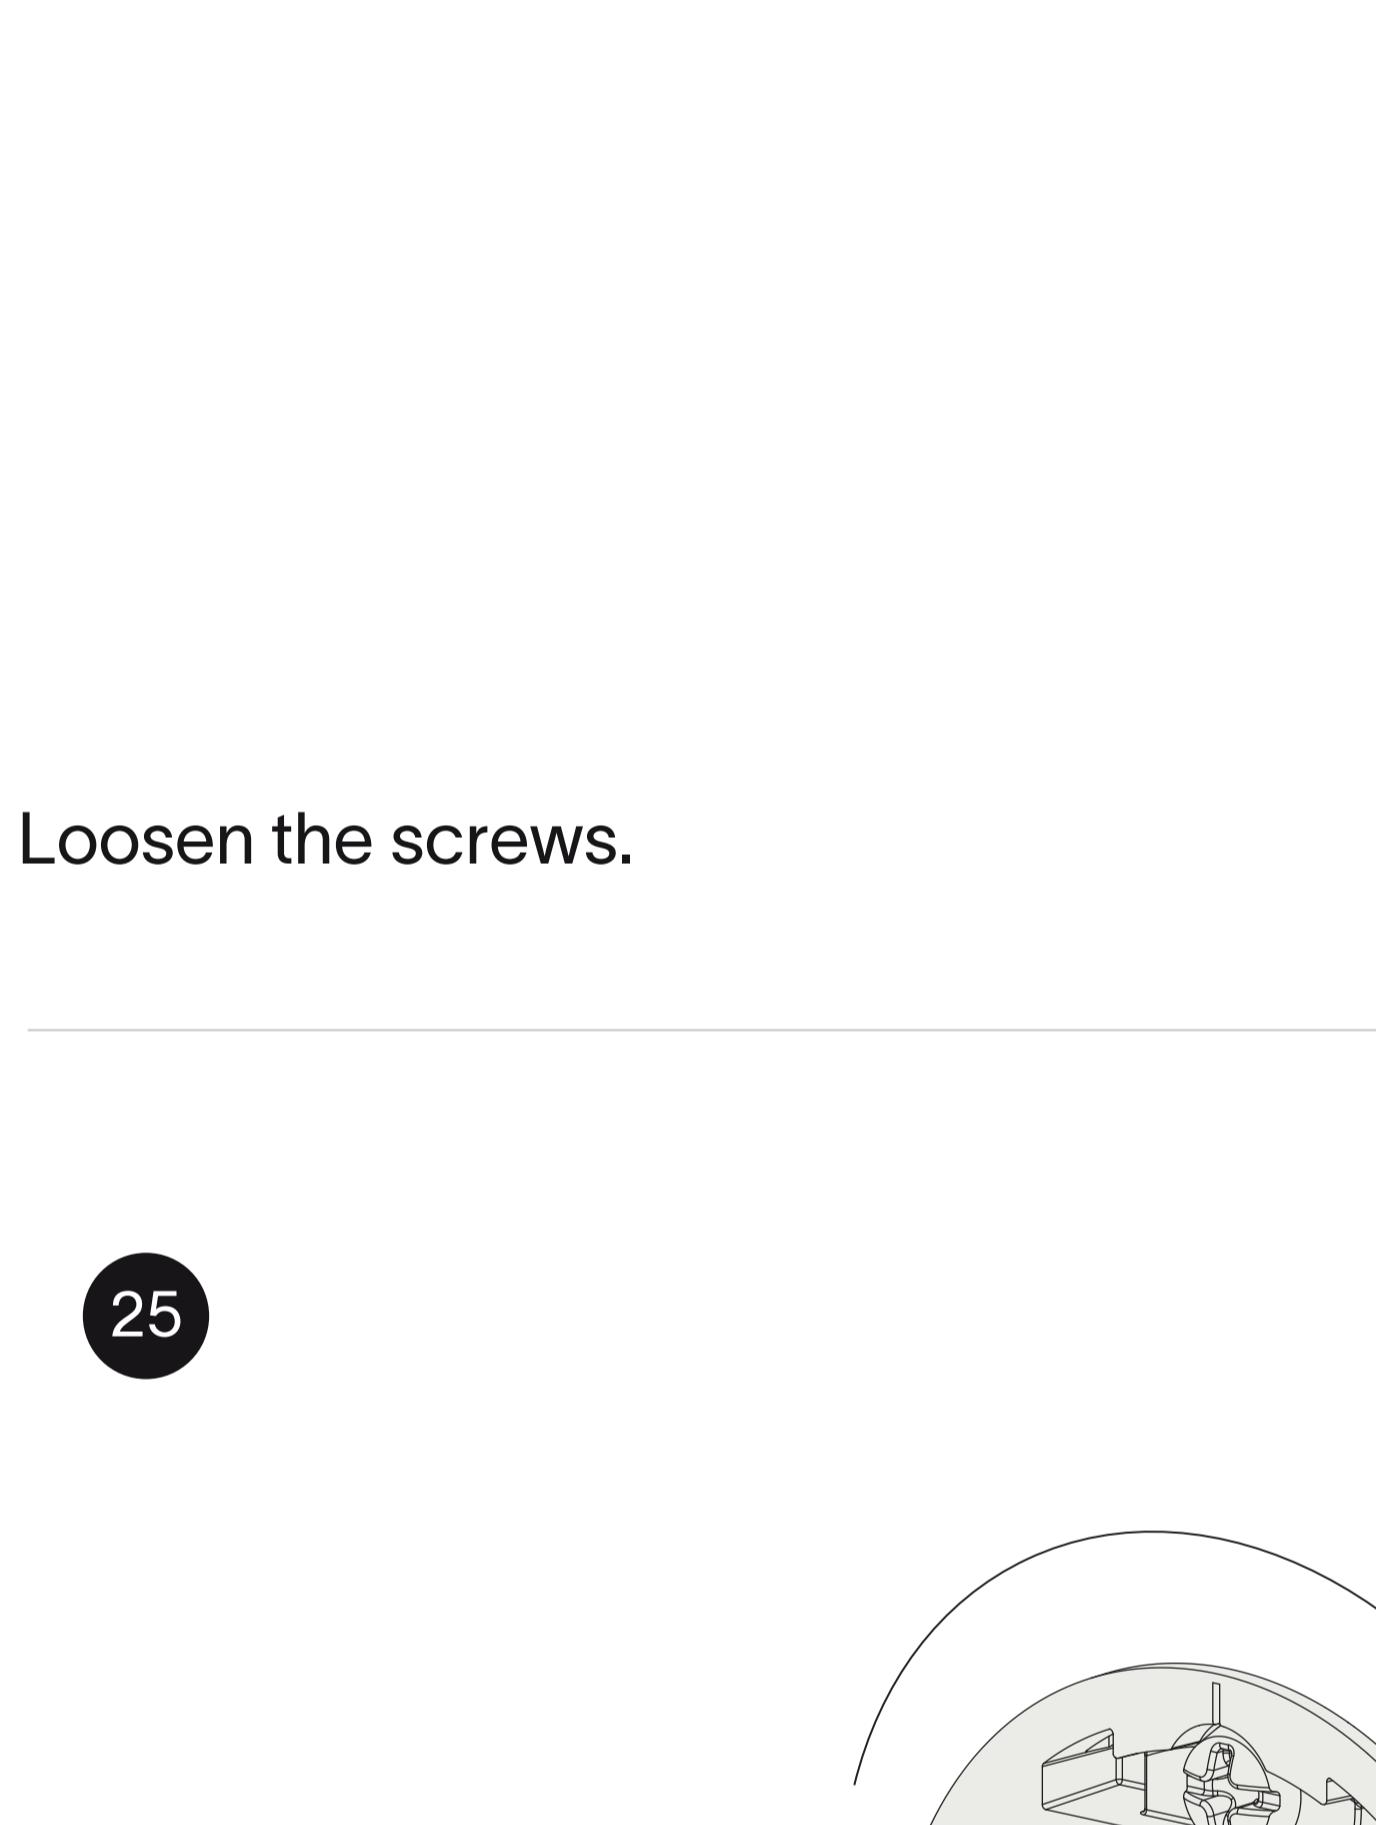


Click off the cover plate using a plug.

24

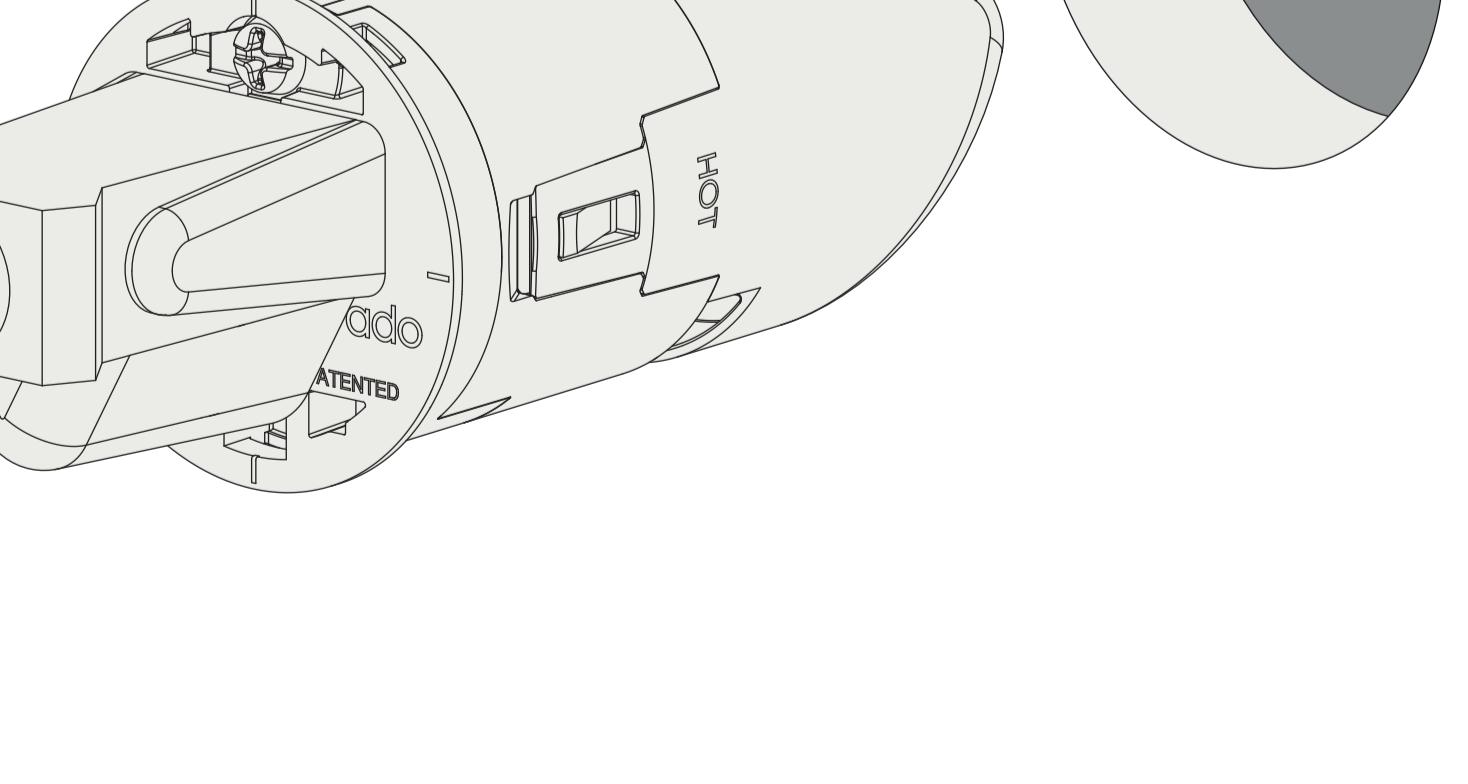

Loosen the screws.

25

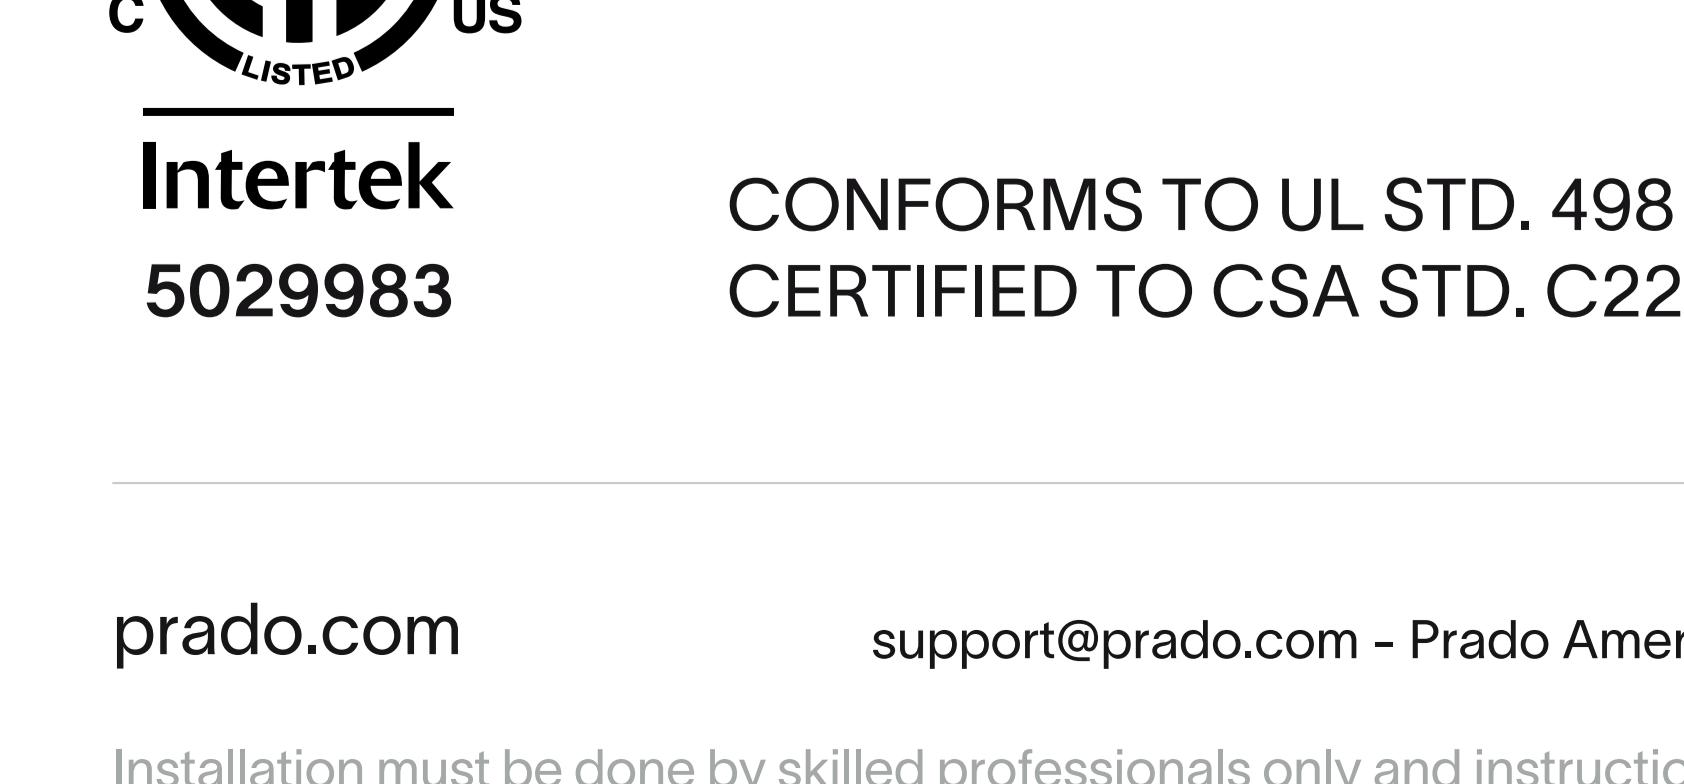

Remove the outlet by using a plug and twisting clockwise.

26



Remove the outlet. Thank you for choosing prado.

ETL LISTED

Intertek

5029983

CONFORMS TO UL STD. 498

CERTIFIED TO CSA STD. C22.2#42

prado.com

support@prado.com - Prado America LLC

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrong use of it. Unskilled personnel attempts to repair a product.